



## Installing PowerBook G3 Lombard Heat Shield

### Tools used in this guide

- [Phillips #0 Screwdriver](#) (1)

### Parts relevant to this guide


- [G3 Lombard Heat Shield](#) (1)

Removing the heat shield enables access to the RAM and the processor below.



## Step 1 - Keyboard

- Turn the computer so that the ports are facing you.
- If the keyboard is locked, open the port cover and turn the keyboard locking screw until the keyboard is unlocked.

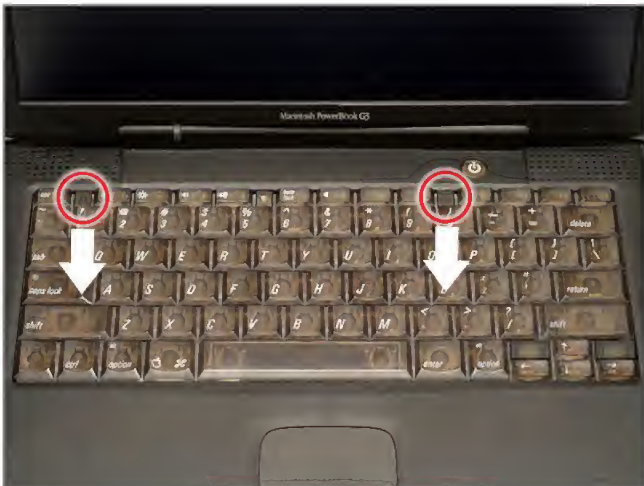

## Step 2


- Pull the keyboard release tabs toward you and lift up on the keyboard until it pops free.
- Make sure you have removed the laptop battery and CD/DVD module from the expansion bays before proceeding.



## Step 3


- Lift the keyboard out by pulling it up and away from you. Rest the keyboard, face down, on top of the trackpad.
- In order to replace the keyboard, you must first remove the modem.



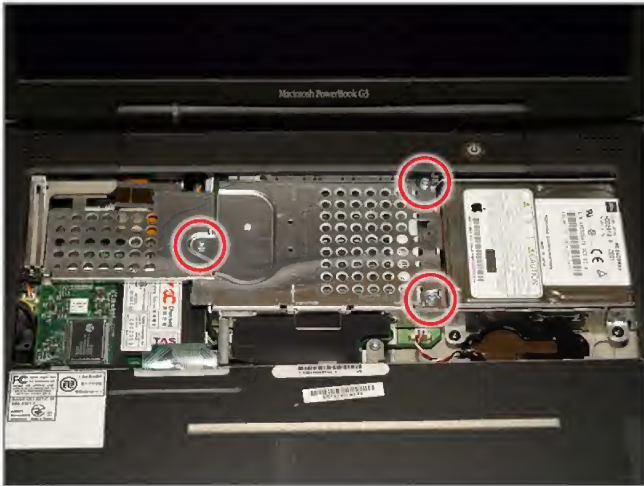

### Step 4 - Heat Shield

- Remove the three silver Phillips screws that attach the heat shield to the internal metal framework.

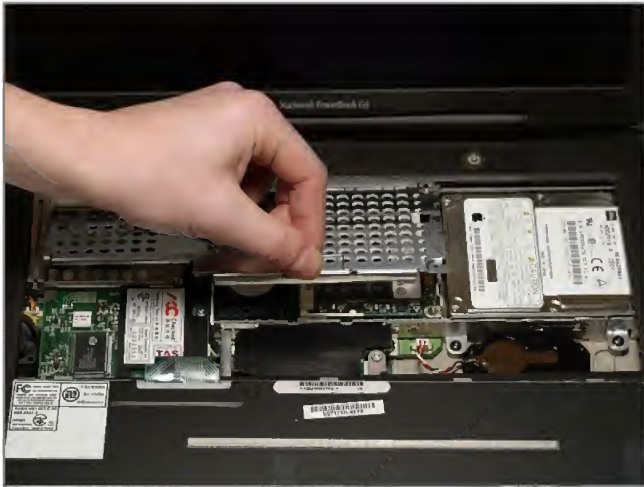

### Step 5

- Lift the heat shield up and pull it toward you.



### Step 6

- Your laptop should look approximately like this.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 13, 2010.

## G3 Lombard Screw Guide

